

# MANUAL **EVOLVE**

MODEL

VERSION / DATE

**EasyPhone EB**

**II. / 13. 1. 2022**




**EN**

# Contents

PHONE DESCRIPTION.....	3
PHONE STATUS ICONS: .....	9
PUTTING THE PHONE IN OPERATION.....	10
CHARGING THE BATTERY .....	10
TURNING PHONE ON/OFF .....	10
UNLOCKING/LOCKING THE KEYPAD.....	11
CALL .....	11
MENU.....	11
MESSAGES .....	12
PHONEBOOK .....	13
CALL LOGS .....	14
MULTIMEDIA .....	14
SOS SETTINGS.....	16
SETTING.....	18
FILE LIST .....	19
APPS.....	20
MAGNIFYER.....	20
WARRANTY AND POST-WARRANTY SERVICE .....	22

# PHONE DESCRIPTION



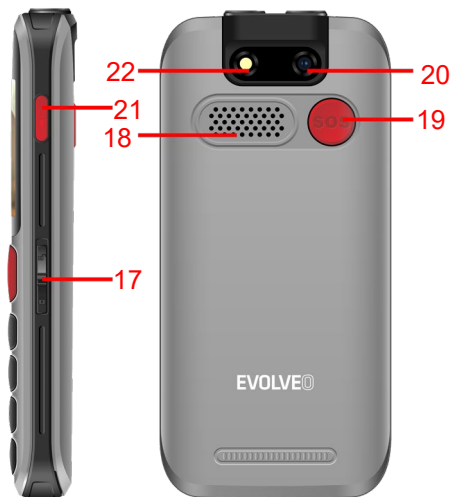

<b>1</b>	<b>Flashlight</b>	<b>12</b>	<b>Micro-USB Connector</b>
<b>2</b>	<b>Earphone</b>	<b>13</b>	<b>Charging Cradle</b>
<b>3</b>	<b>Call Button</b>	<b>14</b>	<b>Volume Settings +</b>
<b>4</b>	<b>Hang-up Button</b>	<b>15</b>	<b>Volume Settings -</b>
<b>5</b>	<b>Enter Button</b>	<b>16</b>	<b>FM Radio Switch</b>
<b>6</b>	<b>“Up” Button</b>	<b>17</b>	<b>Keypad Lock</b>
<b>7</b>	<b>“Down” Button, Displays Menu</b>	<b>18</b>	<b>Loud speaker</b>
<b>8</b>	<b>* Button</b>	<b>19</b>	<b>SOS Button</b>
<b>9</b>	<b># Button</b>	<b>20</b>	<b>Camera</b>
<b>10</b>	<b>Strap Slot</b>	<b>21</b>	<b>Flashlight Off Button</b>
<b>11</b>	<b>Headphone connector</b>	<b>22</b>	<b>Camera Flash</b>









BUTTON	FUNCTION
<p><b>Call Button</b></p>	<p>After pushing this button, a function will be launched and immediately displayed in the display bottom left corner.</p> <p>Press this button to commence a call to the selected phone number.</p> <p>Press this button to accept incoming call.</p> <p>Press in standby mode to view the call history.</p>
<p><b>Hang-up Button</b></p>	<p>Press this button in standby mode to go to the contact list;</p> <p>Press this button to return to the previous menu;</p> <p>Turn phone off: Press and hold the button longer in standby mode to turn the phone off.</p> <p>Turn phone on: Press and hold the button longer to turn the phone</p>

	<p>on again.          Press this button to return to the standby mode.          Press this button to hang up.</p>
<p><b>“Down” Button, Displays Menu</b></p>	<p>Press to scroll through the list of functions;          In standby mode, press the “Down” button to enter the Menu and press the “Up” button to call up the SMS function;          In “FM radio” mode, use the “Up” and “Down” buttons to set the frequency.</p>
<p><b>Numeric buttons</b></p>	<p>In standby mode, you can enter the number you want to call, and in edit mode, you can enter numbers and letters;</p>
<p><b>* Button</b></p>	<p>Push the * button twice in the standby mode to enter the “+” symbol for international calls.</p>

<b># Button</b>	Press to change the text input method. Profile change (long press).
<b>Side Button</b>	<p>Volume button (14): Adjust the volume during a call, when playing videos, and listening to FM radio.</p> <p>FM radio button (15): Press this up/down button to turn the radio on/off .</p> <p>Flashlight button (16): switch the flashlight on/off.</p> <p>Keypad lock button (17): locks/unlocks the keypad.</p>



## Phone status icons:

Icon	Description
	Signal GMS
	Battery status
	Alarm clock active
	Bluetooth On
	Unread SMS
	Vibration profile set
	Outside profile set
	Phone set to silent profile


## Putting the phone in operation

Insert your fingernail into the slot under the back cover of the phone and remove the cover.

Insert SIM1/2 card and, if applicable, the memory card, if purchased. Insert the battery. The metal contacts of the battery must face the contacts in the phone.

Replace the battery cover.

### SIM1/2 cards slot / TF card slot

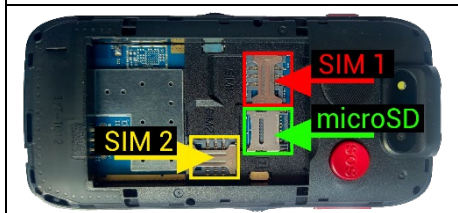

## Charging the battery

Connect the charger to the USB connector. or put the phone in the charging cradle.

The charging will start automatically. The phone can be charged both on and off The battery charge status is indicated on the phone screen.

## Turning phone on/off

To switch on, hold down the red button (4)

until the phone switches on. (You may be prompted to enter a PIN if PIN protection is turned on). When you switch on for the first time, you are asked to select the language of the phone.

To switch off, press and hold the red button (4) until the phone switches off.

## **Unlocking/locking the keypad**

To wake up the phone, press any key; then to unlock it, toggle the keypad lock key (17) or press the call key (3) and then the end call key (4). To lock the keypad, switch the keypad lock key (17).

## **Call**

In standby mode, enter a phone number and press the call key (3) to start a call. Press the end call key (4) to end or reject an incoming call.

## **MENU**

To enter the menu, press the  
Down button (7)

## MESSAGES

The phone allows receiving and sending the SMS text messages. When entering the menu, the following is displayed:

**Write message** – create and send a new SMS

**Inbox** - received messages

**Unsent Messages** - Messages that could not be sent

**Drafts** - messages saved for later work

**Sent messages** - sent messages

**Secure sent messages** - password-protected sent messages

**Templates** - a default list of messages

**SMS settings** - allows you to set preferred storage, memory status, etc.

### **Write message**

Select Menu/ Messages / Write message. Enter the phone number manually or you can select it from the contact list. Enter message text. Using the # button (9) you can switch between lowercase/ uppercase/numbers, and \* button (8) can be used to enter special symbols. Press the green key (3) and select Send.

### **Read message**

To read messages Select Menu / Messages / Inbox, select the appropriate message and press the green Read button (3).

# PHONEBOOK

## **Enter new contact**

Select Menu/Phonebook/Settings/New and press the green button (3). Select the storage location (SIM card or phone). After entering the name and phone number, press the green button (3) to save the contact.

## **Search for a saved contact**

To access Phonebook, press the red button (4) or select Menu / Phonebook. To search, enter the contact's name or use the Up/Down button (6/7) to scroll through the list. After finding the contact, press the green button (3) and select the following options.

**Write message** - allows you to write and send an SMS to the selected contact

**Call** – makes a call to the selected contact

**Display** – displays selected contact details and allows you to edit the contact

**Delete** – removes selected contact

**Import/Export** - allows you to copy contacts from SIM to phone memory and vice versa and import and export contacts.

**Other** - allows you to view memory status, set Speed dial or other functions

## **Speed dial**

Select

Menu/Phonebook/Settings/New/Speed dial and press the green button (3). It is possible to set and store 8 speed dial numbers here, which correspond to numbers 2-9.

After activating Speed dialing in standby mode, press and hold one of the 8 alphanumeric keys and the phone dials the corresponding phone number from the speed dial list.

## **CALL LOGS**

Select Menu/Call logs. From the main menu, enter the Call History, which displays missed calls/dialed numbers/incoming calls/rejected calls and call duration records.

## **MULTIMEDIA**

Select Menu/Multimedia

### **1. Camera**

Press the Up (6) or Enter (5) button to take photos with the built-in camera. Press the green button (3) to enter the menu where images can be viewed or camera settings can be changed.

### **2. Video recorder**

Press the Up (6) or Enter (5) button to start recording video. The recording time depends on the time limit and the capacity

of the memory card. Press the green button (3) to enter the menu where videos can be viewed or recording settings can be changed.

### 3. MP3

The phone allows you to play music files, such as MP3s.

To play or stop, press the green button (3) or Enter (5).

### 4. Video player

Press the green button (3) to select start or pause video, play mode, etc.

### 5. FM radio

To start, use the side button (15) or enter the Menu/Multimedia/FM radio.

Use the Up-Down buttons to start the automatic station search

Press the green button (3) to display other options:

**Auto search:** Automatically search and store stations.

**Channel list:** displays a list of manually or automatically searched stations.

**Manual search:** You can manually enter the station frequency. The \* button (8) acts as ".". To enter 89.9 press "89 \* 9".

**Record:** With this function, you can record an FM program.

### 6. Recording equipment

Enter the audio recorder, press the Options

button to start recording, storage location or file format.

## 7. Gallery

With this function you can select any image and by pressing the green button (3) you can display, rename, delete, etc. the image,

## SOS SETTINGS

This function allows you to automatically send a warning SMS and call the set numbers after pressing the SOS button (19). Select Menu/ SOS settings. You can switch the function on/off, set the numbers to which the phone will call automatically one after the other and the wording of the SMS message.

SOS Settings: Select SOS Mode Settings and set to "On". Then enter up to 5 phone numbers in the SOS Settings menu. You can also set whether to send an SMS and change its wording.

In the SOS Alarm menu, select whether the phone should sound an alarm when this function is triggered.

If the SOS function is switched on, holding down the "SOS" button for a longer time activates the SOS function, which will proceed as follows:

A loud alarm will sound, at the same time



an SMS will be sent to all emergency numbers with the content: "Please help."

Then the set emergency numbers will start dialing, each number will be dialed three times.

SOS call will be terminated if some of the addressees replies to the call or if none of the addressees replies after the third dial-up.

**Important notice:** The phone is equipped with the function of sending the approximate position of the phone via an SOS message after the SOS alarm is triggered. The phone uses the GSM mobile network to determine its position. The position accuracy thus depends on the density of coverage of the GSM network - in cities the accuracy is tens to hundreds of meters, outside cities the accuracy is significantly lower.

**The service is not guaranteed and the accuracy of the results and the availability of the service is not guaranteed in any way by the phone supplier, operator nor the provider of map materials. The service may be terminated at any time without notice.**

# SETTING

Select Menu/Settings to enter.

## Call settings

**Dual SIM:** Using this feature it is possible to adjust the SIM card mode “Two SIM cards”, “Only SIM card 1”, “Only SIM card 2”, “Flight mode”.

**Call divert:** It includes five different settings - Divert always, Divert if not available, Divert if not answered, Divert if busy. Press Cancel to deactivate all call diverts.

**Call waiting:** Activate or deactivate this function, select the option to check the current settings of this function.

**Call barring:** Block numbers that you dial or that call you.

**Other:** Here you can turn on call reminder, automatic redial when you end a call, answer SMS when rejecting a call or automatic call recording.

Call duration reminder.

**Note:** Some features require operator support.

## Phone settings

Select Menu/Settings/Phone settings.

Using this function, the following parameters can be set:

**Time and date** - Time and date setting,

timezone and format setting.

**Language settings** - Set the phone language and the default language for writing texts.

**Shortcuts** - Allows to set two shortcuts from phone menu.

**Automatic keypad lock** - Set the time, after which the keypad is locked.

**Reset settings** - After entering the password "1234", the phone will be reset.

## **Display**

This function sets the key backlight time, contrast and what is to be shown on the display. The contrast is changed using the \* and # buttons.

## **Security**

To protect personal data, you can set the security of the SIM card or phone, a list of unwanted numbers, etc.

## **Profiles**

This mobile phone offers several pre-defined profiles: You can select or edit a profile and activate it.

## **FILE LIST**

File manager manages files on your phone and external memory card. In this menu you can manage pictures, MP3 files and other folders of this menu.

## **APPS**

### **1. Calendar**

You can view the date, add an appointment, delete an appointment, etc. in the calendar.

### **2. Calculator**

This feature offers the usual calculator functions, including plus, minus, multiplication, and division.

### **3. Alarm**

3 alarms can be set in the alarm clock with repeat, snooze or alert type.

### **4. Stopwatch/Timer**

You can use your phone as a simple stopwatch. Press the call button to start the stopwatch and press the same button again to stop it. After stopping, it can be reset with numeric key 5.

### **5. Bluetooth**

You can turn on the feature and then search for another Bluetooth device, pair your phone with another device and use it together. You can also set up external storage, access to audio files, etc. via Bluetooth.

## **MAGNIFYER**

Use the Up-Down buttons to set

magnification. Select Menu/Magnifier/.

<b>Power adapter specifications</b>	
Name, address and business registration number of the equipment manufacturer	Naxya Limited, No. 5, 17/F, Strand 50, 50 Bonham Strand, Sheung,Wan, HongKong,1891486
Device model number	EP-850-EBS
Name or trademark, trade registration number and address of the AC adapter manufacturer	Shenzhen Heliansheng Electronic Co., Ltd. 802.E building, Nan Chang Jianyu No 1 industrial park, Gusu Xixiang Street, Bao'an district, Shenzhen, Guandong, China

AC adapter model identification mark	HLS006
Power voltage	100 - 240 V~
AC input frequency	50/60 Hz
Output voltage	5V
Output current	0,5A
Output power	2,5W
Average activity in active mode	69%
Efficiency at low loads	62%
No-load power consumption	0,1W

## Warranty and post-warranty service

The warranty DOES NOT APPLY to:

- Installation of other firmware than the originally installed in the EVOLVEO phone.
- Electromechanical or mechanical damage to the phone caused by improper use (e.g. cracked display, cracked front or back cover of the phone, damaged micro-USB power connector, SIM card slot, micro-

SDHC card slot, headphone jack, etc.)

- Damage to the speaker and/or headphones by metallic particles.
- Damage by natural forces such as fire, water, static electricity, high temperature.
- Faults caused by normal wear and tear.
- Damage caused by repairs performed by an unqualified person
- Phone firmware, if an update is required due to changes of the mobile network parameters.
- Mobile network failures
- Battery, in case it does not hold its capacity after 6 or more months (the warranty on the battery is 6 months).
- Intentional damage.

### **Warranty and post-warranty service**

Repairs and service may be performed only at an authorized service point for EVOLVEO products (more at [www.evolveo.com](http://www.evolveo.com)); otherwise the phone may be damaged and the warranty voided.



**Disposal:** The crossed-out container symbol on the product, the enclosed documentation or on packaging means that all the electric and electronic equipment, batteries and battery packs in the European Union must be disposed of as sorted waste at the end of their service

life. These products must not be disposed as unsorted municipal waste.



## DECLARATION OF COMPLIANCE

Abacus Electric, s.r.o. hereby declares that the EVOLVEO EasyPhone EB complies with the requirements of standards and regulations relevant for this type of device.

For the full wording of the Declaration of Conformity see <http://ftp.evolveo.com/ce/>

Dovozce / Dovozca / Importer / Importőr

**Abacus Electric, s.r.o.**

Planá 2, 370 01, The Czech Republic

Výrobce / Výrobca / Manufacturer / Gyártó

**Naxya Limited**

No. 5, 17/F, Strand 50, 50 Bonham Strand,  
Sheung Wan, Hong Kong

Made in China

Copyright © Abacus Electric, s.r.o.

[www.evolveo.com](http://www.evolveo.com)

[www.facebook.com/EvolveoCZ](http://www.facebook.com/EvolveoCZ)

All rights reserved.

Product appearance and technical specifications are subject to changes without prior notice.