

 
EVOLVEO



EasyPhone FD




www.evolveo.com

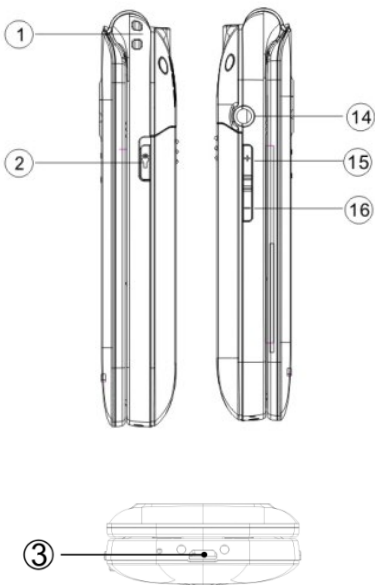

PHONE DESCRIPTIONS

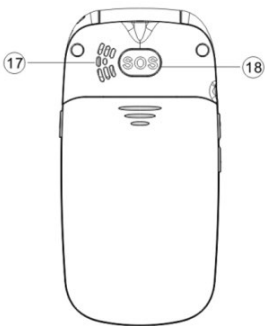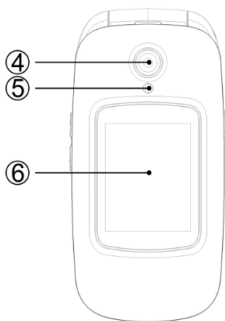  

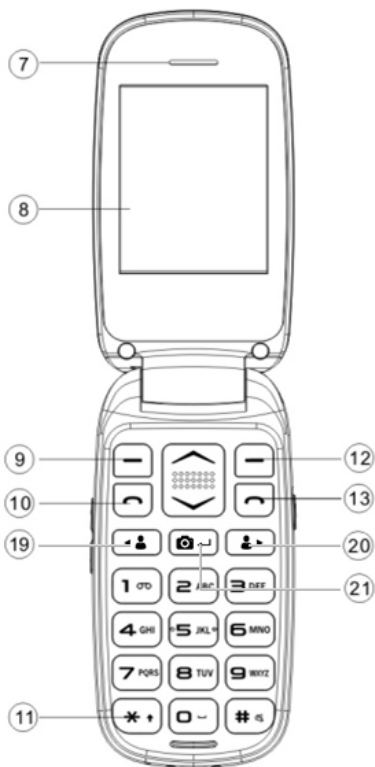 





KEYS DESCRIPTIONS :

| | | | |
|----|---------------|----|---|
| 1 | Lanyard hole | 12 | Right soft key |
| 2 | Torch on/off | 13 | End Call /Power on/off |
| 3 | USB | 14 | Earset Hole |
| 4 | Camera | 15 | Vol+ |
| 5 | Flashlight | 16 | Vol- |
| 6 | Sub-screen | 17 | Speaker |
| 7 | Receiver | 18 | SOS key |
| 8 | LCD Display | 19 | M1 key ◀  |
| 9 | Left soft key | 20 | M2 key  ▶ |
| 10 | Call key | 21 | Camera key  ◀ |
| 11 | Keypad | | |


| KEYS | FUNCTIONS |
|---------------------------------|---|
| Left soft key (LSK) | Press this key to enter the Menu under standby mode; Press this key to realize the function which display on the left-down corner; |
| Right soft key (RSK) | Press this key to enter phonebook under standby mode; Press this key to go back to previous menu; Press this key to silent ring tone when receiving a call. |
| Call key | Press this key to make a call when select a number; Press to answer an receiving call; Press to enter call history under standby mode. |
| End key | Power Off: Long press to power off under standby mode; Power On: Long press to |

| | |
|--------------------------------|---|
| | <p>power on if the phone is power off; Press this key to go back to standby mode; Press this key to end a call.</p> |
| <p>Orientation keys</p> | <p>Press them to scroll the options when browsing a function list; Under standby mode, press down key to enter camera function and press up key to enter SMS function; In "sound recorder", key "down" is "play"; In "FM radio", they adjust volume; Press them to scroll a specified function page; In conversation status, press up or down direction key to tune the sound volume; In "camera" function, it zoom the view.</p> |

| | |
|---|---|
| <p>M1 M2</p>  | <p>It can switch options when press them; Long press M1/M2, to call an emergency call as its setting.</p> |
| <p>Camera key</p>  | <p>Key “Camera” under camera is the “taking photo” key; Key “Camera” under video recorder is the “recorder” key; Key “Camera” under video player is the “play” key;</p> |
| <p>Number keys</p> | <p>Dial numbers under standby mode and enter numbers and characters in editing mode; Long press key “0” to switch on/off torch</p> |
| <p>* Key</p> | <p>Under standby mode, press * key twice to display “+” to call international numbers</p> |

| | |
|-----------------|---|
| # Key | Switch input method under text edit interface. |
| Side Key | Volume key: Adjust volume in conversation, video player, FM radio; Press up & down to select options in menu; Torch key: on/off torch. |

 SIM Card slot / TF Card slot / Battery position as below :

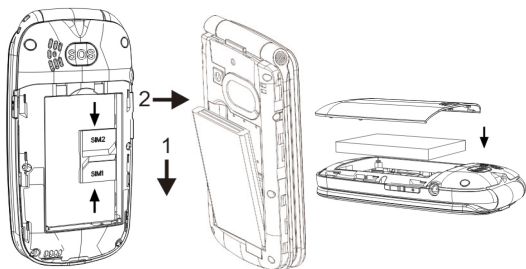

CALL

At Standby, input a phone number and press key “call” to make a call.


To end or reject a receiving call, press the End key.

MESSAGE

Enter this menu, you can view: Write SMS, Inbox, Drafts, Outbox, Sent messages and Messaging settings. The capacity of messages is due to maximum storage capacity built in mobile phone and external SIM cards. And you can check the memory status of the SIM cards or mobile phone.


MULTIMEDIA

1. Camera


Camera supports photographing function, you can take pictures by press Camera key  ← with the embedded camera and adjust the camera settings. The camera lens is in the rear side of the mobile phone and the screen is the viewfinder window. The pictures are taken in JPG format. After downloading to PC, please view with appropriate software. If the mobile phone memory is insufficient, please delete certain pictures or other files in

“File manager”.

In the camera options, the pictures can be view and can be set by “Camera settings”, “Image settings”, “White balance”, “Scene mode”.

The “video recorder” function can be switched in the menu and Camera key  ← press to start video record.



2. Video Recorder

Press Camera key  ← to start video recording. The recording time depends on the time limit and the capacity of the memory card. Enter options to perform the following settings: Switch to camera, Camcorder setting, Video settings and Storage.

3. Audio player

The screen of the music player shows the caption: List, Back. Accessing list will show the name of the music that you have downloaded. Selecting one song of them, you can enter into a list: Play, Refresh list and settings by choosing "options" which is under the detailed list. If your detailed list is empty, you can only see Refresh list and Settings.

Press the **Up & Down** to set Music Playing Mode.

M1 ◀  / M2  ▶: to switch to the previous song and the next song separately.

Camera key  ↵ : Pause and Play

Volume: Press the volume keys to change the volume for playing.

4. Video Player

Enter Video player. Press left soft key to enter options: Play, Send, Rename, Delete, and Storage.

5. FM Radio

To use the FM Radio, please insert the earphone first and then listen to it. You can perform the followings operations as your need:

Press Camera Key  ↵ to power-ON.

Press UP-DOWN Key to adjust volume

Press M1 ◀  << **and** M2  ▶ >> **for** SEARCH Channel Automatically

Channel list: it list the channel which searched by hand or auto search.

Manual input: A certain channel can be heard by manual input the frequency. Key “*” means “.”, input 89.9, only need to press key “8,9, *,9”.

Settings: “Background play”, “Loudspeaker” can be switch on/off, and audio quality can be adjusted.

Record: The FM program can be record by “record” function.

SETTING

1. Phone settings

In this function, you can set Time and date, Languages, Display, You can set up Flight Mode, and UP/ DOWN key shortcuts.

Restore factory settings:

Input the password ‘1234’

2. Security settings

To protect personal privacy, you can set the SIM security, Phone security.

3. Call Setting

Dual SIM settings :

In this function, you can customize the SIM card open mode among “Dual SIM open”, “Only SIM 1 open”, “Only SIM 2 open”, “Flight mode”.

Call waiting: Open or close this function; choose query to check the current state of it.

Call divert: It includes five different situation, including Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy and Divert all data calls; select Cancel all diverts can let all of them deactivated.

Call barring: Restrict the numbers which you will dial or receive.

Advanced settings:

Auto redial: After open this function, the phone will dial the number again

automatically every time when the out call fails or be rejected.


Call time display: Display the total call time.

Call time reminder: You can set the call time reminder mode as Single or periodic; select Off to cancel this function.

Answer mode: You can select Answer Mode



Attention: Parts of the functions need network operator's support.

4. Speed Dial

Setting a phone number which can be called by long press M1 ◀  / M2  ▶.

Select “Menu”, then scroll to “Settings” function by key “up/down”

Select “Speed dial” and press “OK”, then you go to M1/M2 setting menu, fill the related number inside the blank.

You have finished setting M1/M2. After that you can long press M1 ◀  or M2  ▶ to call the related number which setting in M1/M2.

Set number 2-9: There you can edit and save 8 speed dial number which are correspond to the number keys 2-9.

After the speed dial status is On, press and hold one of the 8 speed dial number keys when the phone is in the standby state, the phone will make phone call to the corresponding phone number which has been existed in the speed dial number list.

5. SOS setting

You can switch on/off, setting number, SMS content.

SOS Setting: Select "Menu" → "Settings" → "SOS Setting", set "Status" as "on", then input SOS number in Number 1~5. And you can also set remind messages.

SOS procedure: When SOS status on and long press key "SOS", the SOS function started with below:

A loud emergence alarm will be shouted,

At the same time, a SMS with content "PLS HELP ME." will be sent to all the emergency number;

It will start to call the emergency number one by one, each number will call 3 times;

If somebody answers the call, the SOS will be stopped; or if all the people don't answer the call, it will stop after call all the number 3 times.

TOOLS

Calculator

This function provides the different calculators service including Plus, Minus, Multiplication and Division.

Bluetooth

You can turn on/off Bluetooth.

Bluetooth: you can power on it, and then search the Bluetooth device, you can pair them to operate between them. You also can setting the Bluetooth with storage, audio path, etc.

PHONEBOOK

Phone contact can store up to 250 phone numbers, while SIM cards contact capacity depends on the network operator, please consult the local operator.

CALL LOGS

In the main menu, you can enter call logs to view missed calls/dialed calls/received calls/delete call logs and call timers to view call logs.

SOUND RECORDER

Enter Sound recorder, press key OPTION to Select New Record start recorder, and you can operate below options: New record, Play, List.

IMAGE

With this function, you can select any picture and press left soft key to perform the following operations: View, Browsing style, Send, Use as, Rename, Delete, Sort by, Delete all files, Storage and Image information.

CALENDAR

Calendar can view date, add event, delete event, etc.

ALARM

Alarm can set 3 alarms with repeat, snooze, and alert type.

PROFILES

This mobile phone is provided with several profiles. You can select or customize a profile and activate it. Available options are:

Normal
Silent
Meeting
Indoor
Outdoor

MY FILES

File Manager explores the files in phone and external memory card. In this menu, you can manage the pictures, MP3 files and other folders in this menu.

Audio – Audio folder
Photos – Photo folder
Video – Video folder

The warranty does NOT apply to:

- Installing a different firmware than the one installed in the EVOLVEO phone as original from the factory.
- Electromechanical or mechanical damage to the phone caused by improper use (e.g. broken display, broken front or back cover of the phone, damaged microUSB connector, SIM card slot, microSDHC card slot, headphone jack, etc.).
- Damage to the speaker and headphones caused by metallic particles.
- Damage by natural causes like fire, water, static electricity, high temperatures.
- Defects caused by normal wear and tear.
- Damaged by unauthorized repairs
- Phone's firmware if it requires updating due to changes in mobile network parameters.

- Mobile network malfunctions □ Battery if it does not retain its original capacity after 6 months and more (warranty for battery capacity is for 6 months).
- Intentional damage.

Warranty and post-warranty service

Repairs and servicing may only be carried out in an authorized service centres for EVOLVEO products (see www.evolveo.com), otherwise you may damage your mobile phone and lose the warranty.



Disposal: The symbol of crossed out container on the product, in the literature or on the wrapping means that in the European Union all the electric and electronic products,

batteries and accumulators must be placed into the separate salvage after finishing their lifetime. Do not throw these products into the unsorted municipal waste



DECLARATION OF CONFORMITY

Hereby, the company Abacus Electric, s.r.o. declares that the EVOLVEO EasyPhone FD is in compliance with the requirements of the standards and regulations, relevant for the given type of device.

Find the complete text of Declaration of Conformity at <ftp://ftp.evolveo.com/ce>

Dovozce / Dovožca / Importer / Importőr

Abacus Electric, s.r.o.

Planá 2, 370 01, Czech Republic

Výrobce / Výrobca / Manufacturer / Gyártó

Naxya Limited

No. 5, 17/F Bonham Trade Centre, 50

Bonham Strand, Sheung Wan, Hong Kong

Made in China

Copyright © Abacus Electric, s.r.o.

www.evolveo.com

www.facebook.com/EvolveoCZ

All rights reserved.

Design and specification may be changed
without prior notice.