

# MANUAL **EVOLVEO**

---

MODEL

VERSION / DATE

---

**EasyPhone EG**

1. / 24. 2. 21




**EN**

## **Contents**

BUTTON DESCRIPTION: .....	3
CALLING .....	14
MENU .....	15
CONTACTS .....	15
MESSAGES .....	17
CALL LOGS.....	19
MAGNIFIER:.....	20
MULTIMEDIA.....	20
ORGANIZER .....	22
CAMERA .....	23
IMAGE VIEWER.....	24
PROFILES.....	24
SETTINGS.....	25
PHONE SEARCH FUNCTION .....	27

## BUTTON DESCRIPTION:

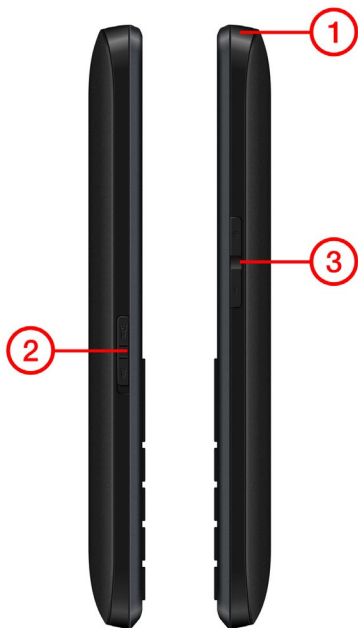









<b>1</b>	<b>Hanging string opening</b>	<b>9</b>	<b>Left function key</b>
<b>2</b>	<b>Torch ON/OFF</b>	<b>10</b>	<b>Right function key</b>
<b>3</b>	<b>Volume+ Volume-</b>	<b>11</b>	<b>Call button</b>
<b>4</b>	<b>Camera</b>	<b>12</b>	<b>End of Call button / Phone ON/OFF</b>

<b>5</b>	<b>Speaker</b>	<b>13</b>	<b>FM radio ON/OFF In Video Menu you record videos using this button.</b>
<b>6</b>	<b>SOS button</b>	<b>14</b>	<b>“*” button</b>
<b>7</b>	<b>Receiver</b>	<b>15</b>	<b>“#” button</b>
<b>8</b>	<b>UP/DOWN button</b>	<b>16</b>	<b>Camera button  ←</b>
		<b>17</b>	<b>Search button</b>

<b>BUTTONS</b>	<b>FUNCTIONS</b>
<p><b>Left function key (LFK)</b></p>	<p>By pressing the button, you will be directed to the Emergency Mode menu. You will start a function that will immediately appear in the left bottom corner of the display.</p>
<p><b>Right Functional Key (RFK)</b></p>	<p>By pressing the button, you will be directed to the contact list in the Emergency Mode. You will return to the previous offer. You will mute an incoming call.</p>
<p><b>Call Button</b></p>	<p>By pressing the button, you will start calling to a selected phone number. You will receive an incoming call. In the Emergency Mode, you will enter the call history.</p>













<p><b>End of Call Button</b></p>	<p>Phone turning off: By longer holding down the button in the Emergency Mode, you will turn off the phone.</p> <p>Phone turning on: By holding down the button, you will turn on the turned-off mobile.</p> <p>By pressing the button, you will return to the Emergency Mode.</p> <p>By pressing the button, you will end up your call.</p>
<p><b>UP/DOWN button</b></p>	<p>With this button, you may scroll options in the list of functions.</p> <p>In the Emergency Mode, you will enter photo contacts by pressing the button DOWN, and by pressing the button UP, you will enter SMS messages.</p> <p>By pressing the cursor, you may scroll through the selected page.</p> <p>During calling, you modify</p>

	<p>the call volume by pressing the UP/DOWN button. When taking pictures, it is used for zooming in/out.</p>
<p><b>Camera button</b></p> 	<p>This button is used for taking pictures in the Camera Mode.</p>
<p><b>Alphanumeric Buttons</b></p>	<p>In the Emergency Mode, they enable to type a mobile number for dialing; in the Edit Mode, typing letters and numbers.</p>
<p><b>“*” button</b></p>	<p>By double-clicking the “*” button, you will type “+” for international calls in the Emergency Mode. In the text typing mode, enables to insert special characters</p>
<p><b>“#” button</b></p>	<p>In the text typing mode, switches the character entering method. Profile changes (by long pressing)</p>

<b>Side Buttons</b>	Volume button: Sets the volume of calls, playing, FM radio; Torch button: Torch ON/OFF
---------------------	--

### Phone status icons:

Icon	Description
	GSM signal
	Battery level indicator
	Keypad locked
	SD card inserted
	Alarm is active
	Music player is on

	Bluetooth on
	You have a missed call
	You have an unread SMS
	The phone has ringing and vibrations on
	The phone has only vibrations on
	The phone has only ringing on
	The phone is in the Silent Mode
	The phone vibrates first and then rings
	The phone is connected to a PC

## Putting the phone into operation

Put your nail into the slot under the back phone cover and remove the cover.

Insert the SIM card or a memory card, if purchased.

Insert the battery. Metal contacts of the battery must be directed against the contacts in the phone.

Re-install the battery cover.

SIM card slot / TF card slot, see figure below:



## Battery charging

Connect the battery charger to the USB connector or insert the phone to the charging stand.

Charging starts automatically.

The phone may be charged in both ON and OFF statuses.

The battery charge status is indicated on the phone display.

## **Phone ON/OFF**

To turn the phone on, hold the red button (12) until the phone turns on. (You may be asked to enter PIN code, if PIN code protection is activated.) At first turning on, you will be asked to select a language.

To turn the phone off, hold the red button (12) until the phone turns off.

## **Keypad Unlock/Lock**

You will activate your phone by pressing any button, then press LFK (9) followed by pressing the “\*” button (14) for unlocking. To lock the keypad, press LFK (9) and then the “\*” button (14). Automatic keypad locking may be set in Settings / Phone Settings / Display / LCD Light

## **Calling**

Enter the requested number on the keypad and then press the green call button (11).

To receive an incoming call, press the green button (11).

To reject a call, press the red button (12).

The in-call volume may be adjusted by

pressing the UP/DOWN button (8).  
For the speakerphone, (hands-free) press the right function key (10) during calling.

## **MENU**

### **CONTACTS**

#### **Insert New Contact**

Select Menu / Phonebook / Add New, and press LFK (9). Select location (SIM card or phone). After entering the name and the phone number, press LFK (9) and save the contact.

#### **Search Saved Contact**

To enter Phonebook, press RFK (10) or select Menu / Phonebook. To search, enter the contact name or use the UP/DOWN button (8) to scroll in the list. After searching the contact, press the green button (11) for calling. If you want to edit the contact or invoke other selections, press LFK (9)

**View** - displays the details of the selected contact

**Send SMS** - enables to write and send SMSs to the selected contact

**Call** - dials the selected contact

**Edit** - enables to edit the selected contact

**Delete** - deletes the selected contact

**Copy** - enables to copy

contacts between the SIM card and the phone memory

**Move** - enables to move contacts between the SIM card and the phone memory

**Add to Black List** - adds numbers that will be blocked

**Settings** - enables to show the status of the memory, set the preferred storage, copy or move contacts, delete contacts, set Speed Dial or other functions

## **Photo Contacts**

A photo may be saved to eight selected contacts.

### **Insert New Photo Contact**

Select Menu / Phonebook / Photo Contacts, and press LFK (9). Use the UP/DOWN button (8) to select the requested position and press LFK (9). After entering the name and the phone number, select the Caller Picture and press LFK (9). Leave the default picture or add a picture From Camera or from files. If you select the option to add the picture from the files, go to the files saved in the phone or in the memory card. If you select the camera, you will be automatically transferred to the Camera and you may take a picture by pressing the Camera button (16). To continue, press LFK (9). After completing insertion or



selection, do not forget to save the changes by pressing LFK (9).

### **Search Saved Photo Contact**

After pressing the DOWN button (8), you may select one of the contacts and by pressing the green button (11) or by pressing the button displayed at each photo, you may dial that number.

### **Speed Dial**

Up to 8 numbers may be saved in the phone for Speed Dial corresponding to 2 to 9 numbers.

Select Menu / Phonebook and using the UP/DOWN button (8) select Add New Contact. Then press LFK (9) and select Settings / Speed Dial / OK. Change the status using LFK (9) to ON. Set the numbers on positions 2 to 9 using LFK (9) from the Phone Book, or manually.

For Speed Dial in the Emergency Mode, press and hold one of 8 alphanumeric keys, and the phone will dial the corresponding phone number from the Speed Dial list.

## **MESSAGES**

The phone enables to receive and send SMS messages. To enter the Menu, use the UP button (8) or Menu / Messages. When you

enter the Menu, the following will be displayed:

**Write Message** - enables writing and sending a new SMS message

**Inbox** - received messages

**Drafts** - messages saved for later work

**Outbox** - messages that could not be sent

**Sent Messages** - messages sent

**Ro-Alert** - requires mobile operator support

**Message Settings** - enables to set the preferred storage, memory status, etc.

### **Write Message**

Select Menu / Messages / Write New Message. Enter message text. Using “#” button (15),

you may switch lowercase / uppercase letters / numbers, using “\*” button (14), you may enter special characters.

Press LFK (9) and select Send.

Enter the phone number manually or select it from the list of contacts.

By pressing LFK (9), select Send.

### **Read Message**

To read messages Select Menu / Messages / Inbox, press LFK (9) and select the respective message. Press LFK (9) / Display.

## **CALL LOGS**

Select Menu / Call Logs, where Missed Calls / Dialed Numbers / Income Calls will be displayed with the option to delete records about call duration.

### **Call Settings**

**Waiting Call:** Activate or deactivate this function, select the option to check the actual function setting.

**Call Divert:** Includes five different settings: Always divert, Divert if unavailable, Divert if not responding, Divert if busy and Divert all data calls. By pressing the Cancel option, you will deactivate all call diverts.

**Call Barring:** Blocks numbers you dial yourself or that call you.

### **Advanced Settings:**

**Blacklist** - list of numbers that will be blocked

**Automatic Repeated Dialing:** After activation, the phone will automatically dial the number repeatedly when the call is interrupted or rejected.

**Call Time Display:** Shows the total call duration.

**Call Duration Notification:** The Call Duration Notification Mode may be set as one-time or repeated notification.

**Answer Mode:** Select the Answer Mode.  
Attention: The function requires partial mobile operator support.

## **MAGNIFIER:**

Select Menu / Magnifier. By pressing the middle button (UP/DOWN) zoom in (magnify) or zoom out (reduce) objects.

## **MULTIMEDIA**

### **1. FM Radio**

Select Menu / Multimedia / FM Radio. By pressing the “5” key switch the radio on/off. By pressing “\*” (14) / “#” (15) or “Volume+ / Volume-” (3) adjust the volume.

By pressing “4” and “6”, you will automatically search the station.

By pressing UP/DOWN (8), you will move to previous/next channel.

For other settings, press LFK (9).

**List of Stations:** Shows the list of manually or automatically searched stations.

**Manual Tuning:** Stations may be listened to with a manual frequency entering. The “#” button is used as “.”; to enter 89.9 just press “89 # 9”.

**Automatic Search:** Search stations automatically and save them.

**Settings:** “Background Play” and “Loudspeaker” may be turned ON/OFF.

## **2. Audio Player**

Select Menu / Multimedia / Audio Player.

Enables to play music files, e.g. MP3.

Select LFK (9) to select the play list. A new play list will be created by repeated pressing LFK (9) and selecting desired pieces from the memory card.

To play or stop, just press “5”. To change the repetition mode, press “2” or “8”. To switch to the previous or next song, press “4” or “6”.

**Volume:** By pressing the volume button, you can change the playback volume.

## **3. Video Recorder**

Select Menu / Multimedia / Video Recorder.

By pressing “5”, you will start recording a video. The recording length depends on the time limit and the memory card capacity. After entering Menu, you may select the following: Switch to Camera, Camera Settings, Video Settings.

## **4. Video Player**

Select Menu / Multimedia / Video Player. By pressing LFK (9), select from the following:

Play, Send, Rename and Delete.

Press "5": To stop or play, press "2" for the full screen mode. Press "4" / "6" for stand-alone switching to previous or next video.

**Volume:** By pressing the volume button, you can change the playback volume.

## **5. Files**

Select Menu / Multimedia / File Manager. The File Manager manages files in the phone and in the external memory card. Here, you can manage pictures, MP3 files and other files in the menu.

## **ORGANIZER**

### **1. Alarm**

Select Menu / Organizer / Alarm. You may set 4 alarms and their Time, Snooze Alarm and Sound. Press "4" and "6" keys for previous or next options.

### **2. Stopwatch**

Select Menu / Organizer / Stopwatch.

### **3. Calculator**

Select Menu / Organizer / Calculator. Use the keypad to enter numbers.

The decimal point is entered by pressing "#"  
(15).

Using UP/DOWN buttons (8), select the requested operation.

#### **4. Bluetooth**

Select Menu / Organizer / Bluetooth.

**Bluetooth** - turning ON/OFF

**Visibility** - turning ON/OFF of phone visibility for other devices

**My Device** - list of devices wirelessly connected or coupled with the mobile phone,

**Search Device** - enables to find and add new devices

**Device Name** - the name your phone will use for identification to other devices

**Advanced** - call diverting for a wireless headset

#### **Calendar**

Select Menu / Organizer / Calendar

#### **CAMERA**

Select Menu / Camera

By pressing "0", you may take photographs.

The camera lens is located on the rear side of the mobile phone, and the display acts as the finder. The photos are in a JPG format.

After downloading your photos to the computer, view them in a respective program. If the memory capacity is not sufficient,

delete some photos or other files in the “File Manager”.

The picture may be viewed in the Camera options and may be edited using “Camera Settings”, “Picture Settings”, “Anti-flicker”, “Scene Mode”, “White Balance”, “Delay Timer”, etc.

Press “4” and “6” for previous and next options.

## **IMAGE VIEWER**

Select Menu / Image Viewer. Is used for picture viewing. Using this function, you may select any picture and by pressing the left button, you may select following options: Display, Display Options, Send, Use as, Rename, Delete, Delete all files and Picture Information.

## **PROFILES**

Select Menu / Profiles. These options are available: Main / Silent / Meeting / Outdoor To edit Profile Activation / Adjustment / Reset to default values, select the profile and press LFK (9). You may select if your phone should ring, vibrate; you may select the volume, keypad tone, SMS message tone, etc. Quick change between the Main and Meeting



profiles is performed by long pressing the “#” button (15).

## **SETTINGS**

### **1. Phone Settings**

Select Menu / Settings / Phone Settings.

Using this function, you may set these parameters:

**Time and Date** - setting of time and date, time zone and format.

**Planned Turning On** - two planned times for mobile turning on/off may be set

**Language** - phone language setting

**Writing Language** - setting of the default language for writing of texts

**Display** - setting of wallpapers and data on the main screen, screen brightness and illumination

**Shortcuts** - the phone enables to set four shortcuts from the phone Menu

**Special Shortcuts** - shortcuts for UP/DOWN buttons (8).

**Flight Mode** - turns all transmitters in the phone off.

### **2. SOS Setting**

Select Menu / Settings / SOS Settings. You may turn it on/off, set a number and SMS message text.

SOS setting: Select "Menu" →, "Settings" →, "SOS Settings", set "Status" to "ON" and then set the SOS number to numbers 1 to 5. You may also set the message text.

Procedure: If SOS is set, by longer pressing the SOS button, you will activate the SOS function that will proceed as follows:

A loud alarm sounds.

At the same time, SMS containing the "SOS" message will be sent to all emergency numbers.

Afterwards, set emergency numbers will be dialed. Each number three times.

SOS will be stopped if any of the dialed persons receives the call or if no person receives the call even after the third calling.

Important warning: The phone features the function of sending the approximate location of the phone by an SOS message after the alarm is triggered. The location may also be identified by sending SMS containing "LBS" from the phone that is saved in EasyPhone EG as an SOS number. The phone will then send an automatic SMS message with the information about its location. The GSM mobile network is used for determination of

the phone location. The accuracy of the phone location depends on the GSM coverage density: in towns, it is tens to hundreds of meters, outside towns is significantly lower.

**No guarantee is provided for this service, and the accuracy of the results and the availability of the service are not guaranteed either by the phone supplier, the operator or the map data provider. The service provision may be terminated any time without any notice.**

### **Security Settings**

Select Menu / Settings / Security Settings. To protect personal data, you may set security of SIM card, phone and phone screen lock.

### **3. Restore Factory Settings**

Enter password "1122".

## **PHONE SEARCH FUNCTION**

When the cradle is connected to the charger and the phone is ON, press the cradle button (17). The phone will automatically trigger an alarm. The alarm may be switched off in two ways: by pressing the cradle button (17) or by turning the phone alarm off.

## **The Warranty DOES NOT Cover:**

- Installation of any firmware to the EVOLVEO phone other than the originally installed one.
- Electro-mechanic or mechanic damages to the phone caused by inappropriate use (e.g. cracked display, cracked front of rear cover, damaged microUSB connector, SIM card slot, earphone jacks, etc.)
- Damages to the loudspeaker and earphones by metal particles.
- Damages by natural influences, e.g. fire, water, static electricity, high temperature.
- Malfunctions due to common wear.
- Damages resulting from unauthorized repairs.
- Phone firmware if requires updates due to changes of mobile network parameters.
- Mobile network malfunctions.
- Battery if its capacity decreases after 6 or more months (the battery warranty is 6 months).
- Malicious damages.

## **Warranty and Post-warranty Service**

Repairs and service of EVOLVEO products (more at [www.evolveo.com](http://www.evolveo.com)) must be provided by authorized service centers only; otherwise, the phone may be damaged and the warranty may be invalidated.



**Disposal:** The crossed-out container symbol on the product, in the attached documents or on packaging means all the electric and electronic equipment, batteries and battery packs in the European Union must be disposed of as separate waste at the end of their service life. These products must not be disposed as unsorted municipal waste.



## **DECLARATION OF CONFORMITY**

We, Abacus Electric, s.r.o., hereby declare

that the EVOLVEO EasyPhone EG complies with standards and regulations applicable for this type of device.

For the full wording of the Declaration of Conformity see

<http://ftp.evolveo.com/ce/>

Supply adaptor specifications	
Name, address and business registration number of the manufacturer	Naxya Limited, No. 5, 17/F, Strand 50, 50 Bonham Strand, Sheung,Wan, Hong Kong,1891486
Device model No.	NB-0500500EU
Name or trademark, business registration number and address of AC adaptor manufacturer	Shenzhen Nanbang Eelectronics Co. LTD, 2/3F, A1 building Lingpoleng industrial area, Haosi, Shajing street, Shenzhen, China
Identification mark of AC adaptor model	S012DBV1900060
Supply voltage	100 - 240 V~
Input AC Frequency	50/60 Hz

Output voltage	5.17 V
Output current	0.5 A
Output power	3.53 W
Average activity in active mode	71.69%
Low load efficiency	65.7%
No-load power consumption	0.05 W

Dovozce / Dovožca / Importer / Importőr

**Abacus Electric, s.r.o.**

Planá 2, 370 01, Czech Republic

Výrobce / Výrobca / Manufacturer / Gyártó

**Naxya Limited**

No. 5, 17/F, Strand 50,

50 Bonham Strand, Sheung Wan, Hong Kong

Made in China

Copyright © Abacus Electric, s.r.o.

[www.evolveo.com](http://www.evolveo.com)

[www.facebook.com/EvolveoCZ](https://www.facebook.com/EvolveoCZ)

All rights reserved.  
Product appearance and technical specifications are subject to changes without any notice.