

MANUAL **EVOLVE0**

MODEL

VERSION / DATE

EasyPhone ET

II. / 12. 1. 2024




EN

Table of Contents

PHONE DESCRIPTION	3
PHONE STATUS ICONS.....	8
CHARGING THE BATTERY.....	10
SWITCHING YOUR PHONE ON/OFF ...	10
UNLOCKING/LOCKING THE KEYPAD..	11
CALL	11
MENU	11
NEWS.....	11
CONTACTS	12
CALL RECORDS.....	14
MULTIMEDIA.....	14
SOS SETTINGS	16
SETTINGS	17
LIST OF FILES.....	19
APPLICATIONS.....	19
LUPA	20

PHONE DESCRIPTION



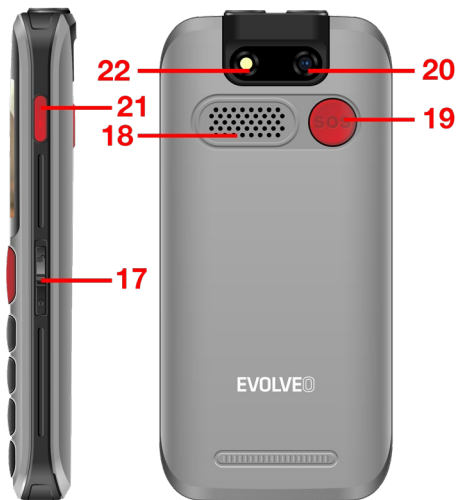



1	Flashlight	12	USB-C connector
2	Handset	13	Charging cradle
3	Call button	14	Volume setting +
4	End call button	15	Volume settings -
5	Enter button	16	FM radio switch
6	'Up' button	17	Keypad lock
7	'Down' button, menu call	18	Speaker
8	The * button	19	SOS button
9	# button	20	Camera
10	Hole for strap	21	Flashlight switch
11	Headphone connector	22	Flash of the camera







<p>PUSH BUTTON</p>	<p>FEATURES</p>
<p>Call button</p>	<p>Press this button to start the function, which will immediately appear in the bottom left corner of the display.</p> <p>Press this button to start a call to the selected phone number;</p> <p>Press to answer an incoming call;</p> <p>Press the button in standby mode to view your call history.</p>
<p>End call button</p>	<p>Press this button in standby mode to go to the contact list;</p> <p>Press this button to go back to the previous menu;</p> <p>Switching off the phone: Hold the standby button longer to turn off the phone.</p> <p>Switching on your phone: Press and hold the button</p>

	<p>for a longer time to switch the phone back on. Press this button to return to standby mode. Press this button to end the call.</p>
<p>'Down' button, menu call</p>	<p>Press to scroll through the options in the function list; In standby mode, press the 'Down' button to enter the Menu and press the 'Up' button to call up the SMS function; In 'FM Radio' mode, use the 'Up' and 'Down' buttons to adjust the frequency.</p>
<p>Numeric buttons</p>	<p>In standby mode, they allow you to enter the number dialed and in edit mode, they allow you to enter numbers and letters;</p>
<p>The button *</p>	<p>Press the * button twice in standby mode to enter the "+" symbol for international calls.</p>

# button	Press the button to change the way you enter text. Change profiles (long press).
Side button	<p>Volume button (14): Adjust the volume for calls, videos and FM radio.</p> <p>FM radio button (15): Pressing this button up/down turns the radio on/off.</p> <p>Flashlight button (16): switches the flashlight on/off.</p> <p>Keypad lock button (17): locks/unlocks the keypad.</p>

Phone status icons:

Icon	Description
	GSM Signal
	Battery charge level

	The alarm is active
	Bluetooth on
	You have an unread SMS
	Set Vibration Profile
	Set Profile Outdoors
	Phone profile Silent


Putting your phone into service

Insert your fingernail into the slot under the back cover of the phone and remove the cover.

Insert the SIM1/2 card and, if applicable, the memory card if you have purchased one. Insert the battery. The metal contacts of the battery must face the contacts in the phone.

Replace the battery cover.

SIM1/2 card slot / TF card slot

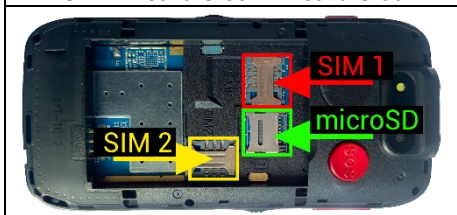

Charging the battery

Connect the charger to the USB-C connector

or put your phone in the charging cradle. Charging starts automatically. The phone can be charged both on and off. The battery level is indicated on the phone screen.

Switching your phone on/off

To switch on, hold down the red button (4) until the phone switches on. (You may be prompted to enter your PIN if PIN protection is enabled). The first time you switch on, you will be asked to select the language of your phone.

To switch off, press and hold the red button (4) until the phone switches off.

Unlocking/locking the keypad

To wake up the phone, press any button, then to unlock it, toggle the keypad lock button (17) or press the call button (3) followed by the end call button (4). To lock the keypad, toggle the keypad lock button (17).

Call

In standby mode, enter the phone number and press the "call" button (3) to start the call.

Press the end call button (4) to end or reject an incoming call.

MENU

To enter the menu, press the Down button (7)

NEWS

Your phone can receive and send SMS text messages. When you enter the menu, you will see:

Write a message - create and send a new SMS

Inbox - messages received

Unsent messages - messages that are failed to send

Concepts - messages saved for later work

Sent messages - sent messages

Secure sent messages - password protected sent messages

Templates - preset list of messages

SMS settings - allows you to set preferred storage, memory status, etc.

Write a message

Select Menu/Messages/Write a message. Enter the phone number manually or select it from the contact list. Enter the text of the message. Using the press. #(9) to toggle uppercase/lowercase letters/numbers, *(8) to enter special symbols. Press the green button (3) and select Send.

Read the report

To read messages Select Menu/Messages/ Inbox, select the relevant message and press the green button (3) Read.

CONTACTS

Insert new contact

Select Menu/Contacts/Options/New and press the green button (3). Select the storage location (on the SIM card or on your phone). After entering the name and phone number, press the green button (3) to save the contact.

Find a saved contact

To access Contacts, press the red button (4) or select Menu/Contacts. To search, enter the contact name or use the Up/Down button (6/7) to scroll through the list. After finding the contact, press the green button (3) and select the following options.

Write message - allows you to write and send SMS to the selected contact

Call - dials the selected contact

View - shows the detail of the selected Contact and allows you to edit the selected contact

Delete - deletes the selected contact

Import/Export-allows you to copy contacts between the SIM and the phone memory and import export contacts.

Other - allows you to view the status memory, set the Speed dial or other features

Speed dialling

Select Menu/Contacts/Options/Other/Speed dial" and press the green button (3). It is possible to set and store 8 speed dial numbers corresponding to numbers 2-9. After activating Speed Dial in standby mode, press and hold one of the 8 alphanumeric buttons and your phone will dial the corresponding phone number from

the speed dial list.

CALL RECORDS

Select Menu/Call logs. From the main menu, you can access Call History, which shows missed calls/dialled numbers/incoming calls/rejected calls and call duration records.

MULTIMEDIA

Select Menu/Multimedia

1. Camera

Press the Up (6) or Enter (5) button to take photos with the built-in camera. Press the green button (3) to enter the menu where you can view the images or change the camera settings.

2. Videorekordér

Press the Up (6) or Enter (5) button to start recording the video. The length of the recording depends on the time limit and the capacity of the memory card. Press the green button (3) to enter the menu where you can view the videos or change the recording settings.

3. MP3

Your phone can play music files, e.g. MP3 files.

Press the green button (3) or Enter (5) to

play or stop.

4. Video player

Press the green button (3) to select start or pause video, playback method, etc.

5. FM radio

To start, use the side button (15) or enter Menu/Multimedia/FM radio.

Use the Up-Down buttons to start the automatic station search

Press the green button (3) to display the other options:

Auto. search: Automatically find and store stations.

Channel list: displays a list of manually or automatically searched stations.

Manual search: Stations can be listened to by manually inserting the frequency. The * button (8) works as ",". To insert 89.9 just press "89 * 9".

Record: With this function "you can record the FM programme.

6. Recording equipment

Enter the voice recorder, press the Options button to start recording, save location or file format.

7. Photo gallery

With this function, you can select any image and press the green button (3) to view, rename, delete, etc.

SOS SETTINGS

This function allows you to automatically send a warning text message and call set numbers when you press the SOS button (19). Select Menu/ SOS settings. You can turn the function on/off, set the numbers to which the phone will automatically call and the text of the SMS message.

SOS settings: Select SOS Mode Settings and set to "On. Then enter up to 5 phone numbers in the SOS Settings menu. You can also set whether to send an SMS message and change the text of the message.

In the SOS Alarm menu, select whether you want the phone to sound an alarm when this function is activated.

If the SOS function is switched on, a longer hold on the "SOS" button will activate the SOS function, which will proceed as follows:

A loud alarm will sound and an SMS will be sent to all emergency numbers with the following content: "Please help."

The set emergency numbers will then start dialling, each number will be dialled three times.

The SOS call stops if any person answers the call or if no person answers the call

after the third dial.

Important Notice: The phone is equipped with the function of sending the approximate location of the phone via SOS message after triggering an SOS alarm. The phone uses the GSM mobile network to determine its location. The accuracy of positioning depends on the density of GSM network coverage - in cities the accuracy is tens to hundreds of metres, outside cities the accuracy is significantly lower.

There is no guarantee for this service and the accuracy of the results or availability of the service is in no way guaranteed

phone supplier, operator or map provider. The provision of the service may be without the notification is terminated at any time.

SETTINGS

Select Menu/Settings to enter.

Call settings

Dual SIM: With this function, the You can adjust the SIM card mode "Two SIM cards", "SIM card 1 only ", "SIM card 2 only ", "Airplane mode".

Call forwarding: It includes five different settings - Redirect always, Redirect when

unavailable, Redirect when unresponsive, Redirect when busy. Press Cancel to deactivate all call forwarding.

Call waiting: Activate or deactivate this feature, select to check the current settings of this feature.

Call blocking: Blocking numbers you dial yourself or that call you.

Others: Here you can turn on call reminders, automatic redialing when a call is dropped, SMS reply when a call is rejected or automatic call recording.

Call duration reminder.

Warning: Some features require operator support.

Phone settings

Select Menu/ Settings/ Phone settings.

This function can be used to set the following parameters:

Time and date - Time, date settings, time zone and format.

Language settings - Set your phone's language and default texting language.

Shortcuts - allows you to set two shortcuts from the phone menu

Automatic keyboard lock - Set the time it takes to lock the keyboard.

Reset - After entering the password '1234', the phone will be set to the default state.

Display

This function sets the backlight time of the keys, the contrast and what is to be displayed on the screen. Contrast is changed using the * and # keys.

Security

To protect your personal data, you can set up SIM card or phone security, a list of unwanted numbers, etc.

Profiles

This mobile phone offers several preset profiles. You can select or edit a profile and activate it.

LIST OF FILES

The file manager manages the files on your phone and on the external memory card. In this menu you can manage images, MP3 files and other folders of this menu.

APPLICATIONS

1. Calendar

In the calendar, you can view the date, add an event, delete an event, etc.

2. Calculator

This feature offers the usual calculator functions including plus, minus,

multiplication and division.

3. Budík

The alarm can be set to 3 alarms with repeat, snooze or alert type.

4. Stopwatch / Timer

You can use your phone as a simple stopwatch. Pressing the call button starts the stopwatch and pressing the same button again stops it. After stopping, they can be reset with the numeric button 5.

5. Bluetooth

You can turn it on and then find another Bluetooth device, pair your phone with another device and use it together. You can also set up external storage, access audio files, etc. via Bluetooth.

LUPA

Use the Up-Down buttons to adjust the magnification. Select Menu/ Magnifier/.

Power Adapter Specifications	
Name, address and business	Abacus Electric, s.r.o.

registration number of the equipment manufacturer	Planá 2, 370 01, Czech Republic, 1891486
Device model number	EP-851-ET
Name or trademark, trade registration number and address of the AC adapter manufacturer	Shenzhen Heliansheng Electronic Co., Ltd. 802.E building, Nan Chang Jianyu No 1 industrial park, Gusu Xixiang Street, Bao'an district, Shenzhen, Guandgong, China
AC Adapter Model ID	HLS006
Supply voltage	100 - 240 V~
AC input frequency	50/60 Hz
Output voltage	5V

Output current	0,5A
Output power	2,5W
Average activity in active mode	69%
Efficiency at low load	62%
No-load power consumption	0,1W

Warranty and post-warranty service

The warranty does NOT cover:

- Installing firmware other than the one originally installed on the EVOLVEO phone.
- Electrical or mechanical damage to your phone caused by improper use (e.g. cracked display, cracked front or back cover, damaged USB-C power connector, SIM card slot, microSDHC card slot, headphone input, etc.)
- Damage to the speaker and headphones caused by metal particles.
- Damage from natural influences such as fire, water, static electricity, high temperature.
- Failures caused by normal wear and tear.

- Damage caused by repairs carried out by an unqualified person
- Your phone's firmware, if it needs updating due to changes in mobile network parameters.
- Mobile network failures
- The battery if it does not retain its original capacity after 6 months or more (the battery capacity warranty is 6 months).
- Intentional damage.

Warranty and post-warranty service

Repairs and servicing can only be carried out at an authorized service point for EVOLVEO products (more at www.evolveo.com), otherwise you may damage your mobile phone and lose your warranty.



Disposal: The crossed-out container symbol on the product, in the accompanying documentation or on the packaging means that in EU countries, all electrical and electronic equipment, batteries and accumulators must be

disposed of separately at the end of their useful life as separated waste. Do not dispose of these products in unsorted municipal waste.



DECLARATION OF

CONFORMITY

Abacus Electric, s.r.o. hereby declares that the EVOLVEO EasyPhone ET meets the requirements of the standards and regulations that are relevant for the type of device.

The full text of the Declaration of Conformity can be found at
<http://ftp.evolveo.com/ce/>

Importer / Producer - Importer / Producer
Importer / Manufacturer - Importőr / Gyártó:
Abacus Electric, s.r.o.
Planá 2, 370 01, Czech Republic

Made in China

Copyright © Abacus Electric, s.r.o.
www.evolveo.com
www.facebook.com/EvolveoCZ

All rights reserved.

The appearance and technical specifications of the product are subject to change without notice.