

MANUAL **EVOLVE0**

MODEL

VERSION / DATE

EasyPhone FL

1. / 8. 1. 2024



EN


Table of Contents

IMPORTANT NOTICE.....	3
PHONE DESCRIPTION.....	5
CALLING	13
REPORT	13
CONTACTS.....	14
CALL RECORDS	15
MULTIMEDIA	15
SOS SETTINGS.....	19
SETTINGS	21
LIST OF FILES.....	24
APPLICATIONS	25
A MAGNIFIER.....	26

Dear Customer,
Thank you for choosing an **EVOLVEO**
mobile phone.


IMPORTANT NOTICE

	If you are driving a motor vehicle, use a headset with a microphone when making calls. In urgent situations, park your car on the side of the road so you can continue an important call.
	Switch off your phone when boarding the aircraft and do not switch it on on board.
	Be very careful when using your phone near devices such as pacemakers, hearing aids or other medical devices, as the phone may interfere with their operation.
	Do not attempt to disassemble the phone yourself. If you have any problems with your phone, ask

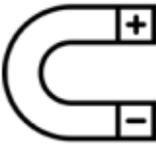	your dealer or service provider for help.
	Do not connect your phone to the charger unless the battery is inserted.
	Protect your phone from the effects of magnetic fields. Do not bring it close to magnetic elements such as credit cards.
	Protect from liquids. If your phone gets liquid or corrosion, remove the battery immediately and ask your dealer for help.

PHONE DESCRIPTION



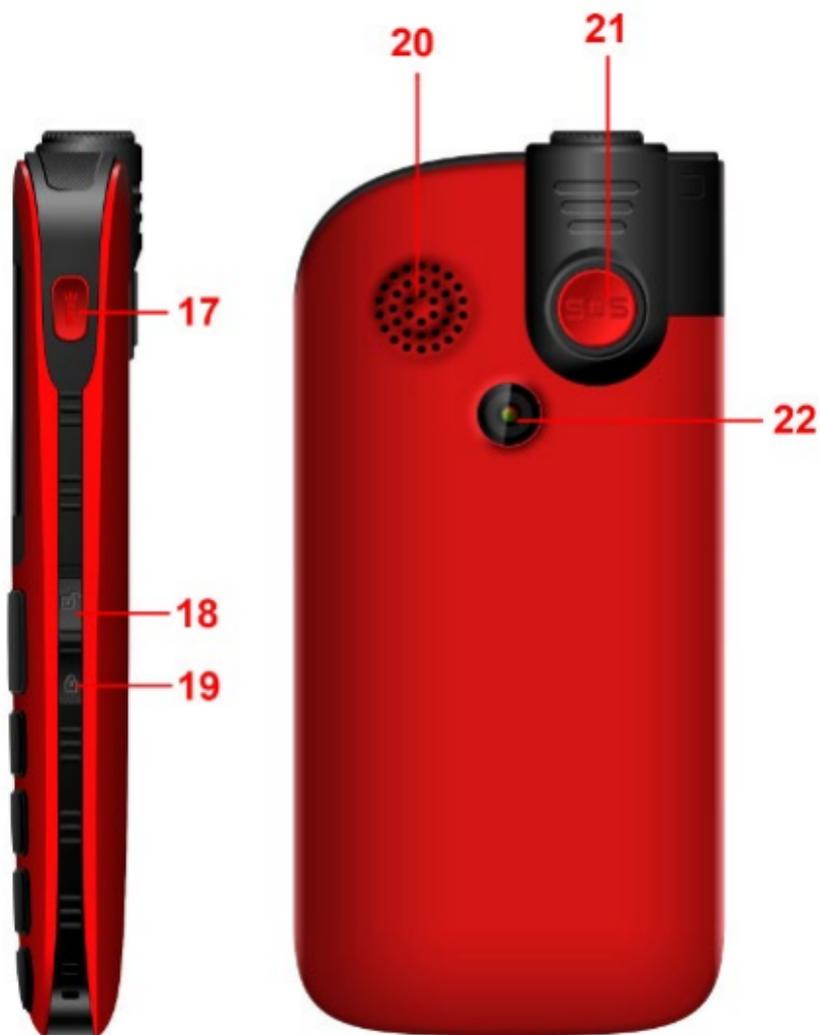

1	Flashlight	12	USB C connector
2	Handset	13	Charging cradle
3	Call button	14	Volume +
4	End call button	15	Volume -
5	Numeric button	16	FM radio switch
6	'Up' button	17	Flashlight switch
7	'Down' button, menu call	18	Unlock
8	'Asterisk' button	19	Lock


9	The 'Cross' button	20	Speaker
10	Hole for strap	21	'SOS' button
11	Headphone connector	22	Camera

PUSHBUTTON	FEATURES
Call button	<p>Press this button to start the function, which will immediately appear in the bottom left corner of the display.</p> <p>Press this button to start a call to the selected phone number;</p> <p>Press to answer an incoming call;</p> <p>Press the button in standby mode to view your call history.</p>
End call button	<p>Press this button in standby mode to go to the contact list;</p> <p>Press this button to go back to the previous menu;</p> <p>Switching off the phone: Hold the</p>

	<p>standby button longer to turn off the phone.</p> <p>Switching on your phone: Press and hold the button for a longer time to switch the phone back on.</p> <p>Press this button to return to standby mode.</p> <p>Press this button to end the call.</p>
<p>'Down' button, menu call 'Asterisk' button</p>	<p>Press them to scroll through the list of functions;</p> <p>In standby mode, press the 'Down' button to enter the Menu and press the 'Up' button to call up the SMS function;</p> <p>In 'FM Radio' mode, use the 'Up' and 'Down' buttons to adjust the frequency.</p>
<p>Numeric</p>	<p>In standby mode, they allow you to</p>

buttons	enter the number dialed and in edit mode, they allow you to enter numbers and letters;
The * button	Press the * button twice in standby mode to enter the "+" symbol for international calls.
# button	Press the button to change the way you enter text.
Side button	Volume button: Adjust the volume for calls, videos and FM radio. Pressing this up/down button turns the phone on/off. Flashlight button: switch the flashlight on/off.

SIM card/TF card slot location, see picture below:

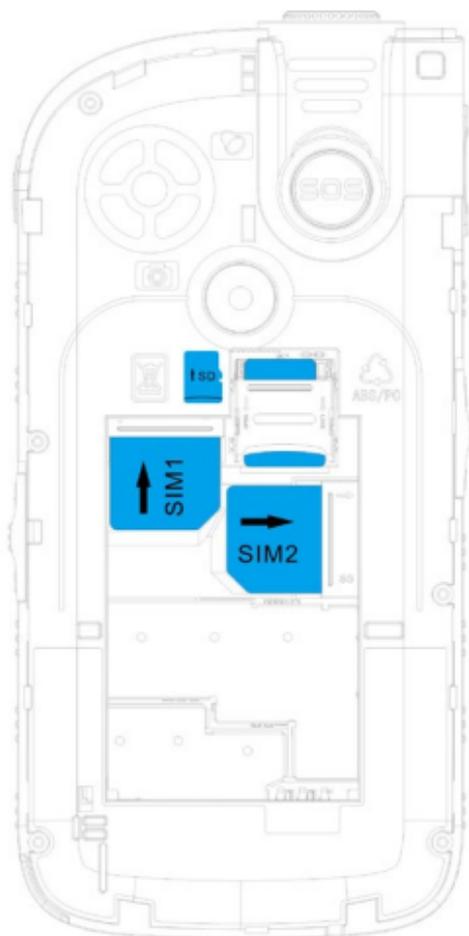

CALLING

In standby mode, enter the phone number and press the "call" button to start the call.

Press the End Call button to end or reject an incoming call.

REPORT

When you enter the menu:

- Write a message
- Inbox messages
- Unsent messages
- Concepts
- Sent messages
- Secure inbox messages
- Templates
- Settings
- Message capacity

Message capacity is determined by the maximum storage capacity of the phone and external SIM cards. You can check the memory status of your SIM card or phone.

CONTACTS

Up to 250 phone numbers can be stored in the phonebook, the capacity of the contacts on the SIM card depends on the phone operator, please contact your phone operator for information.

1. Speed dialling

Set up phone numbers that can be speed dialed by long pressing the 2-9 buttons.

Select "Menu" and use the down button to find the "Phonebook

Select "Options/Further/Fast Dial" and set the numbers 2-9: It is possible to set and store 8 speed dial numbers corresponding to numbers 2-9. After activating Speed Dial in standby mode, press and hold one of the 8 alphanumeric buttons and your phone will dial the corresponding phone number from the speed dial list.

CALL RECORDS

From the main menu, you can access Call History, which shows missed calls/dialled numbers/incoming calls/rejected calls and call duration records.

MULTIMEDIA

1. Camera

Press the 'Up' button button to take photos with the built-in camera. You can also use the same button to adjust the camera settings. If you run out of memory, delete some pictures or other files in the "File Manager".

The image can be viewed in the camera options and can be edited using "Camera Settings" and "Image Settings".

2. Videorekordér

Press the camera 'Up' button button to start recording the video. The length of the recording depends on the time limit and the capacity of the memory card. After entering the Options menu, you can select the following settings: Switch to Camera, Camera Settings, Video Settings and Storage.

3. MP3

The following legend will appear on the screen: List, Back. The list will show the names in stock that you have uploaded.

Select one of them to enter the list:

Select an option from the detailed list to play, update the list or change settings.

If there are no songs in the list, you only see Update List or Settings.

Press the **Up and Down** buttons to go to the previous or next track.

Numeric button 5: To stop and play

Volume: Press the volume button to change the playback volume.

4. Video player

Call up the video player. Press the call button to open Options.

5. FM radio

You can select the following options:

Press the FM radio switch to turn on or off.

Press the Volume button to adjust the playback volume.

Use **the Up-Down buttons** to start the automatic station search

Station list: displays a list of manually or automatically searched stations.

Settings: The "Background Playback" and "Speaker" functions can be switched on and off.

Recording: Use the "Record" function to record the FM programme.

6. Recording equipment

Enter the voice recorder, press the Options button to select New Recording, and you can choose one of the options below: New entry, Play, List.

7. Photo gallery

With this function, you can select any image and press the call button to select the following options: Browse, Rename, Delete, etc.

SOS SETTINGS

You can turn the function on/off, set the number and the text of the SMS message.

SOS settings: Select "Menu" → "Settings" → "SOS Settings", set "Status" to "On" and then set the SOS

number to numbers 1-5. You can also set the wording of the message.

Procedure: If the SOS function is switched on, a longer hold on the "SOS" button will activate the SOS function, which will proceed as follows:

A loud alarm will sound and an SMS will be sent to all emergency numbers with the following content: "Please help."

The set emergency numbers will then start dialling, each number will be dialled three times.

The SOS call stops if any person answers the call or if no person answers the call after the third dial.

SETTINGS

1. Call settings

To set up a dual SIM card :

With this function you can adjust the SIM card mode "Two SIM cards", "SIM card 1 only ", "SIM card 2 only ", "Airplane mode".

Call forwarding: It includes five different settings - Forward always, Forward when unavailable, Forward when no answer, Forward when busy and Forward all data calls. Press Cancel to deactivate all call forwarding.

Call waiting: Activate or deactivate this feature, select to check the current

settings of this feature.

Call blocking: Blocking numbers you dial yourself or that call you.

Advanced settings:

Automatic redial When you activate this feature, your phone will automatically redial the number every time a call is dropped or rejected.

Warning: Some features require operator support.

2. Phone settings

You can use this feature to set the date and time, language, shortcut keys and automatic display lock.

3. Display

This function adjusts the delay before the display turns off, the contrast and the backlight time. The individual values are changed using the * and # keys.

4. Security

To protect your personal data, you can set up SIM card or phone security, a list of unwanted numbers, etc.

Restore factory settings

Insert password '1234'

5. Profiles

This mobile phone offers several preset profiles. You can select or edit a profile

and activate it. The following options are available:

Normal
Quiet
Meetings
Inside
Outside

LIST OF FILES

The file manager manages the files on your phone and on the external memory card. In this menu you can manage images, MP3 files and other folders of this menu.

My Music - Audio folder
Photos - folder Photos
Videos - Videos folder

APPLICATIONS

1. Calendar

In the calendar, you can view the date, add an event, delete an event, etc.

2. Calculator

This feature offers the usual calculator functions including plus, minus, multiplication and division.

3. Alarm clock

The alarm can be set to 3 alarms with repeat, snooze or alert type.

4. Stopwatch / Timer

You can use your phone as a simple stopwatch. Pressing the call button starts the stopwatch and pressing the same button again stops it. After

stopping, they can be reset with the numeric button 5.

5. Bluetooth

You can turn Bluetooth off or on.

Bluetooth: You can turn it on and then find another Bluetooth device, pair your phone with another device and use it together. You can also set up external storage, access audio files, etc. via Bluetooth.

A MAGNIFIER

Use the Up-Down buttons to adjust the magnification.

Warranty and post-warranty service

Repairs and servicing can only be

carried out at an authorized service point for EVOLVEO products (more at www.evolveo.com), otherwise you may damage your mobile phone and lose your warranty.



Disposal: The crossed-out container symbol on the product, in the accompanying documentation or on the packaging means that in EU countries, all electrical and electronic equipment, batteries and accumulators must be

disposed of separately at the end of their useful life as separated waste. Do not dispose of these products in unsorted municipal waste.



DECLARATION OF CONFORMITY

The company Abacus Electric, s.r.o. hereby declares that the EVOLVEO EasyPhone FL meets the requirements of the standards and regulations that are relevant for this type of device.

The full text of the Declaration of
Conformity can be found at
<http://ftp.evolveo.com/ce/>

Importer / Producer

Abacus Electric, s.r.o.

Planá 2, 370 01, Czech Republic

Made in China

Copyright © Abacus Electric, s.r.o.

www.evolveo.com

www.facebook.com/EvolveoCZ

All rights reserved.

The appearance and technical specifications of the product are subject to change without notice.